

Made in the USA

CALTRENDTM
Custom Seat Covers

Part# CV477

Row: Rear-60/40 Split Bench

Application Available for: Chevy Traverse, GMC
Acadia, Buick Enclave 2011-2017

Parts included:

Backrests-2 Headrest-2

Bottom Cushion-2

Installation Instructions

2121 South Anne Street
Santa Ana, CA 92704

800-846-8621

For General Information
or Warranty contact:
support@caltrend.com

Made in the USA



Part#CV477 Rear- 60/40 Split Bench

Step #1- Prepare Seats

Step #2-Install Backrest



Pull the latch located on the back of the backrest to bring the seat forward. Place the cover over the backrest but under the safety restraint, matching its contours and cutouts. Tuck in the bottom, sending the velcro to the back. Also pull the velcro through the headrest, and secure the fit with velcro.

Step #3- Install Backrest




Lift up the carpet and pull the velcro through the back. Secure the fit by attaching the velcros together.

Step#4-Install Cushion



Place the cover onto the cushion, matching its contours and cutouts. Tuck in the top piece of the cover, sending the straps to the back.

Step#5- Install Cushion

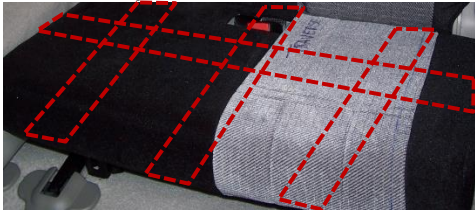

Pull the straps through the back, and buckle the straps accordingly. Make sure to pull on the straps tightly, so that the cover is well fitted.

Step#6- Install Headrest



Place the cover over the headrest, matching its contours and cutouts. Make sure the solid piece is facing the front. Then secure the fit by attaching the velcros together.

Step#7- Finishing Touch



Once all covers have been installed adjust the seating and headrests to their regular position. Tuck all straps underneath the seating. Now you are ready to enjoy your CalTrend Seat Covers 😊

****Enjoy your CalTrend Seat Covers****

*****In case of dirty or stained covers hand wash with mild detergent and air dry. NEVER MACHINE WASH OR DRY. The material may come apart from lamination or foaming. This will also void any warranty.*****