

Made in the USA

CALTRENDTM
Custom Seat Covers

Part#:CV499

Rear Row

*40/60 Split back & Solid
Cushion*

(Separate headrests, with arm rest)

Application Available for:
2012-2013 Chevy Cruze

Installation Instructions

2121 South Anne Street
Santa Ana, CA 92704

800-846-8621

www.caltrend.com

Parts included:

Headrest- X2
Side panels -X2
Armrest -X1
Backrest cover -X2
Bottom cushion cover -X1

CV499: 40/60 Split Back & solid cushion –with separate, with arm rest



Step#1 – Apply side cover
(Apply side cover. Push in plastic wedges between door and cushion.)



Step#2 – Install Backrest
(Apply backrest, slide down.)



Step#3- Attach Velcro
(Attach Velcro on the back of seat cover.)




Step#4– Install armrest
(Slide on armrest covers and apply velcro.)



Step#5-Remove Bottom Cushion
(Pull up on the bottom cushion to snap off the hooks. This will give you the chance to install the cover.)



Step#6- Install Bottom Cushion
(Apply the Bottom Cushion, wrap the cover over the cushion.)

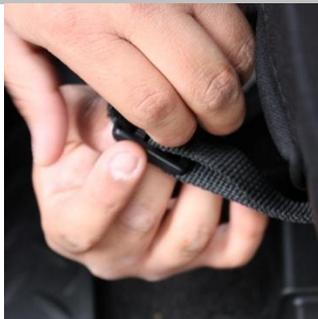

Step#7- Attach Laces Together
(Attach laces to the buckles and tighten down.)



Step#8- Apply headrest
(Slip on headrest cover.)