


Installation Instructions

40/60 or 60/40 Split Bench or solid bench

Headrest: You will need to remove the headrest prior to installing your seat covers. Please note this only applies to headrests which are fully adjustable.


- Some vehicles will come with **built-in** headrest or **folding** headrest where you **DO NOT** need to remove the headrest.
- In some cases you will need to fully lift the headrest, exposing a pin hole on the opposite base which will allow you to remove it.
- In any case where you are not able to remove the headrest covers proceed to contact our support team via phone **(800)846-8621** or email **Support@Caltrend.com** for assistance.
- You will need to align the headrest cover next to the headrest. This will allow you to determine the position the headrest needs to be installed.

TIPS FOR HEADREST REMOVAL

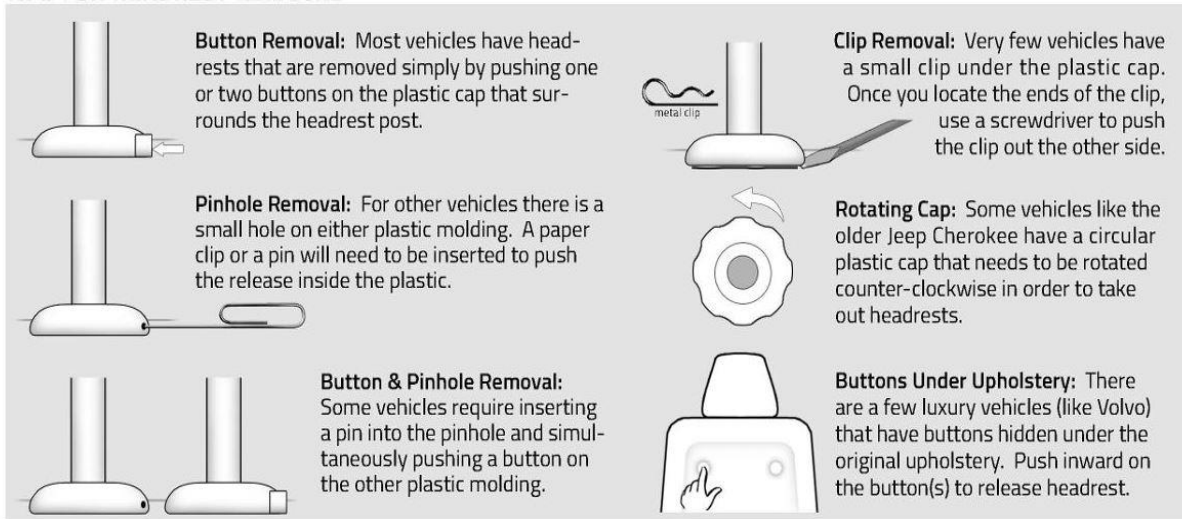

Remove Cushion (if applicable): First confirm if you have a 60/40 or solid bottom cushion.

- You will need to remove the bottom cushion for most **sedan** vehicles.
- This will only apply if you have a **SOLID CUSHION**.
- There will either be a **pressure clip** on each end where you will need to firmly push up **OR** have a **clip with a locking mechanism** that you will need to slightly pull or rotate.
- Please note some of these cushions may also be hooked on the rear section with an added bracket.
- You will need to press down on the rear section of the seat and pull towards the front to undo the bracket.
- This **DOES NOT** apply to trucks or most SUVs as the cushion folds up.

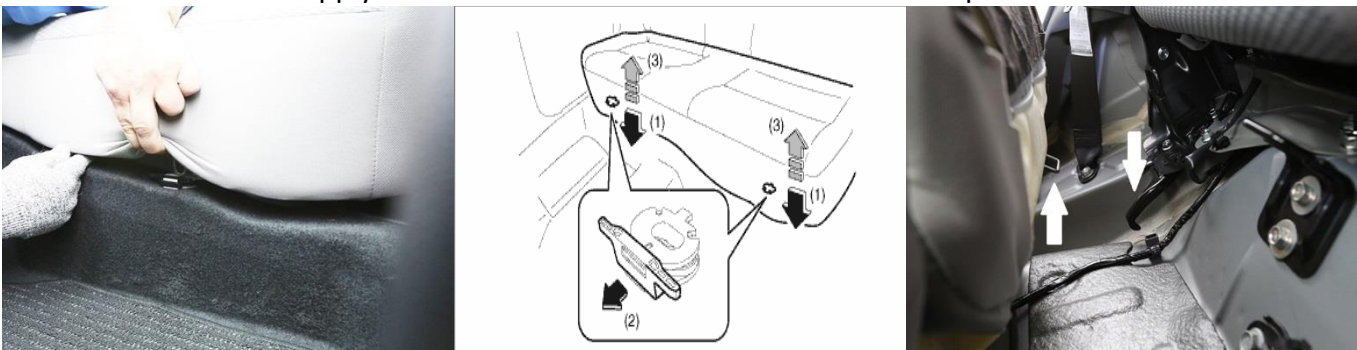

Install Cushions:

- Detach all the male buckles from the cushions
- Some **Trucks** and **SUVs** will have a 40/60 cushion while others a 60/40 cushion. The installation process will be identical for both of these vehicles. (These vehicles might also come with a **solid cushions**, the process will remain the same)
- **Most sedan** vehicles will come with a **solid cushion**.
- Align the covers to the cushion, so that all the cut outs align properly.
- Note some covers will have **2 cut outs per side for child hooks**.
- Run the straps across from each other and attach them accordingly.
- Occasionally some bottom cushions will come with either elastics with S-hooks or white plastic tabs. The S-hooks will attach under the cushion while the plastic tabs will just tuck in between the seat. **(Applies to most non removable cushions)**
- **If applicable** attach the Velcro strips underneath the cushions carpeting.

60/40 or 40/60 Cushions



Solid Cushion



Install Backrest:

- Detach all the buckles from the backrest **if applicable**.
- Note the majority of the backrest on sedan vehicles will come with Velcro's which will attach together or to the carpeting of the vehicle.
- Some **Trucks** and **SUVs** will have a 40/60 backrest while others a 60/40. The installation process will be identical for **MOST** of these vehicles. (These vehicles might also come with a **solid backrest**; the process will remain the same).
- Most **sedan** vehicles will come with a **solid backrest** while others might have a 60/40 or 40/60 backrest. The installation process will remain the same.
- Fold the cushion up as this will bring the backrest forward about 1 inch (applies to most Trucks only).

- You will need to remove the male buckle from the longest strap as this will allow you to properly feed the strap behind the backrest.
- Make sure to pass the 60% backrest under the integrated seat belt located on the middle.
- Once the straps are properly attached you will need to firmly tighten them by pulling up.
- You will need to pass the side to side strap under the seat and over the seat belt anchor if any, then attach to the opposite side and firmly tighten it.
- If your vehicle has an armrest/Cup holder the backrest cover will have a cut out made to cover the back section.

40/60 or 60/40 Backrest



Solid or 60/40 Backrest (SEDAN & SUV ONLY)



Armrest/Cup Holder Tray & Side Panels (Optional):

- The armrest/cup holder tray will come with Velcro on the backside which will attach to together.
- The side panels will need to be aligned properly. They will have white plastics around which will tuck in between the plastic trim of the vehicle.



Feel free to contact us for any questions or concerns:

Phone: [1\(800\)846-8621](tel:1(800)846-8621)

Email: Support@CalTrend.com

In case your seat covers get dirty or stained, you need to hand wash them with mild detergent and let them air dry. **NEVER MACHINE WASH OR DRY** as the lamination might come undone; this will also void your warranty.